




Water Softener Technical Operating Guide

Drain Line




Make sure drain line is not kinked or blocked and terminates to open drain with 2" air gap.

Brine Drum

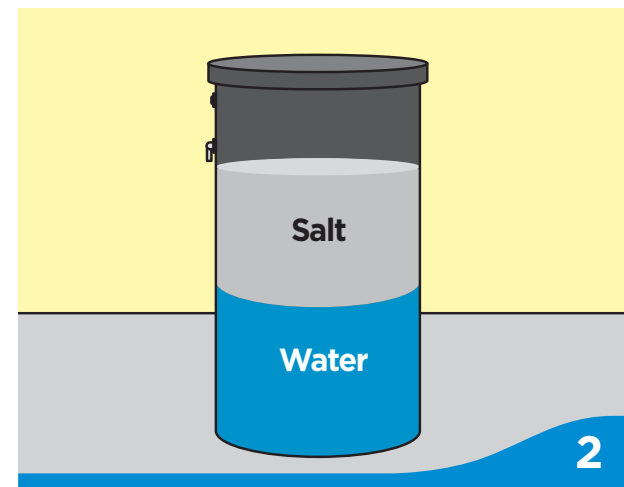


Salt level in brine drum should be above water level. If out of salt, each resin tank must regenerate twice (after replenishing salt) to restore full softening capacity.

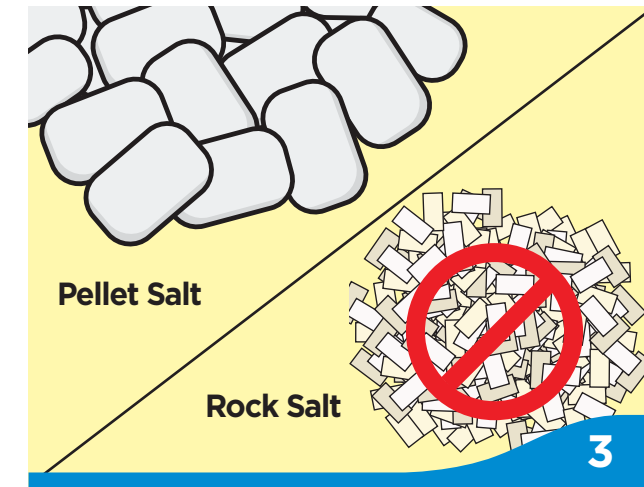


Use pellet salt only. Other types of salt contain impurities that can damage the equipment and cause salt bridging.

Bypass

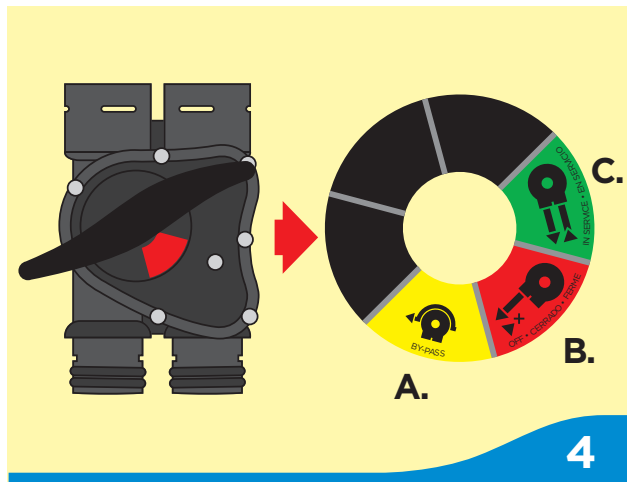

Bypass Option 1
 A. In Bypass — water will flow but will not be softened.
 B. OFF — no water will flow through the system.
 C. In service.

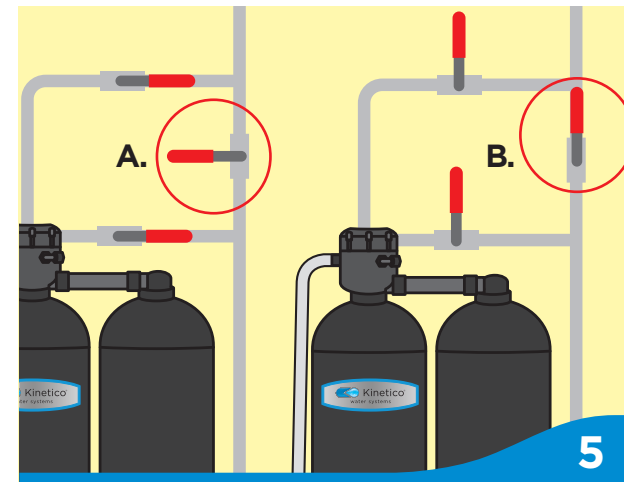

Bypass Option 2
 A. In Service
 B. In Bypass

